

- Quick release lever allows for swift installation and removal.

Instructions of Use :

- Remove the rear wheel.
- Open and loosen the QR, position the chains onto the cog, then place the axle into the right dropout.
- Tighten and close the QR lever.

Note :

- For use with QR axles only.

