

- For Presta valves with non-removable valve cores.

**Instructions of Use:**

- ① Unscrew and open Presta valve.
- ② Place o-ring onto the neck of the valve.
- ③ Attach Valve Extender.

